


Instructions for Assembly of the Acclaim® Guard Columns

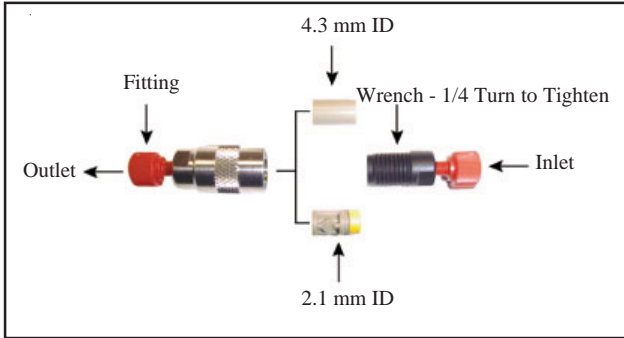


To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

Instructions for Assembly of the Acclaim® Guard Columns

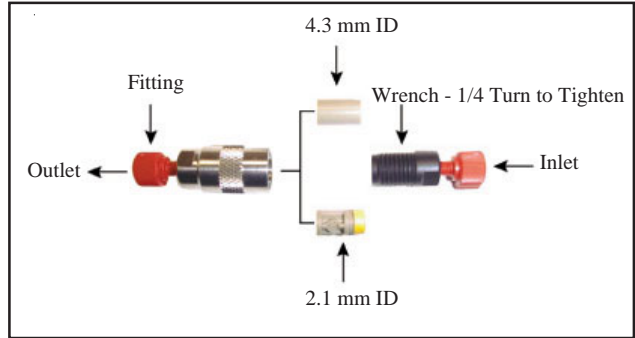


To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

Instructions for Assembly of the Acclaim® Guard Columns

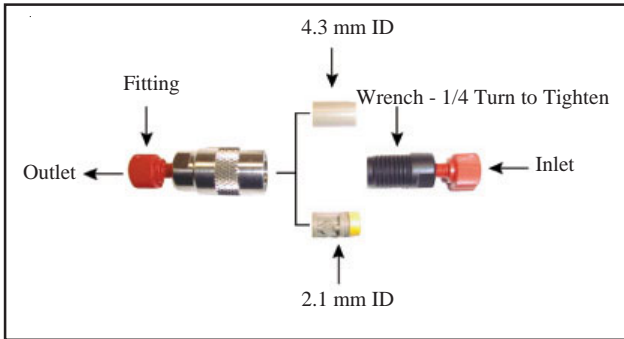


To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

Instructions for Assembly of the Acclaim® Guard Columns

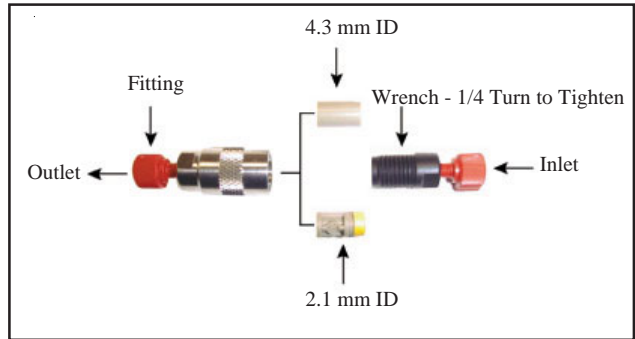


To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

Instructions for Assembly of the Acclaim® Guard Columns

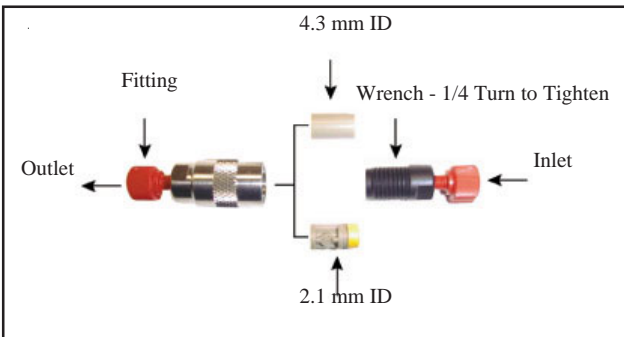


To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

Instructions for Assembly of the Acclaim® Guard Columns

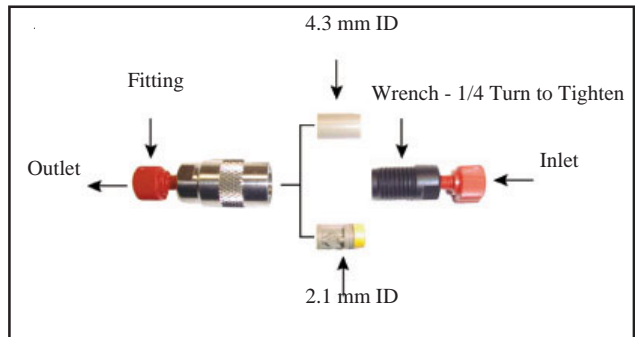

To remove the guard cartridge, open the cartridge holder and replace the cartridge as shown above.



Document No. 031822-05

